



Panasonic Lumix DMC-GF2 Front Cover Replacement

This guide shows how to remove and replace the front cover of the camera.

Written By: Nicole Gerlach



INTRODUCTION

This guide requires the use of a screw driver and close attention to which screws need to be removed.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery




- On the bottom of the camera, use your finger to push the lock button to the open position which will cause the hinged door to swing open.

Step 2

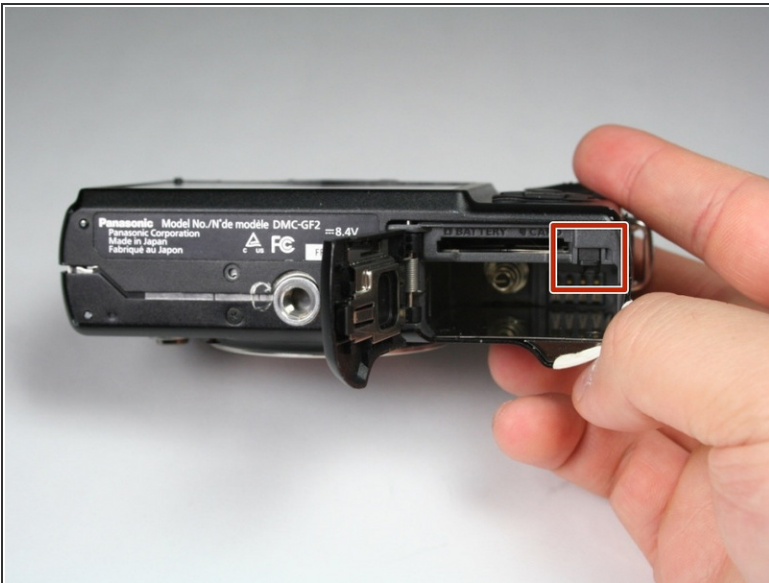

- Push the small black tab that holds the battery with your finger to release the battery.
- Use your fingers to pull the battery out of the camera.

Step 3 — Front Cover

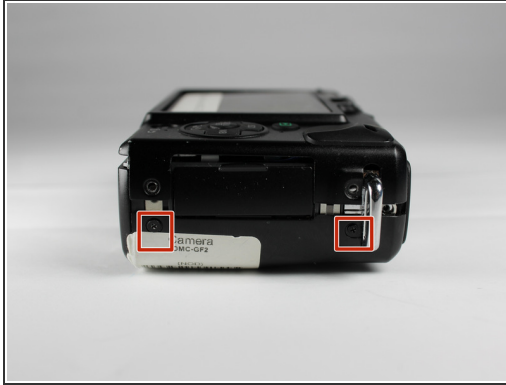


- Using a Philips #00 screwdriver, remove six 2.69 mm screws located on the two short sides and on the bottom of the camera.
- i** To loosen a screw, turn the screwdriver to the left. To tighten a screw, turn the screwdriver to the right.

Step 4



- Using a Phillips #00 screwdriver, remove four black 2.69 mm screws from the front of the camera.

Step 5

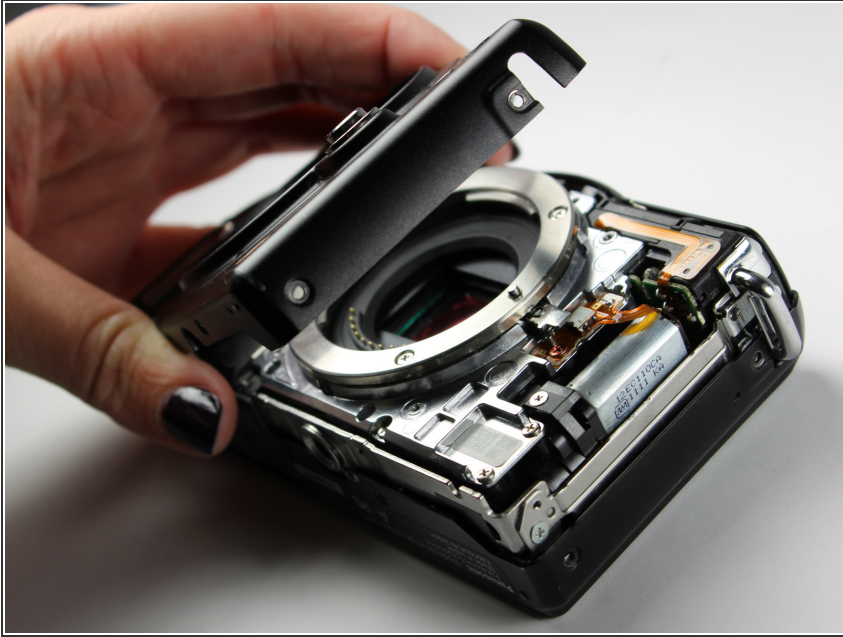

- Using your hand, gently lift up the front cover and separate it from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-29 03:57:12 PM.